

## **AiM Firmware Documentation**

## How to update SmartyCam HD firmware

- To update SmartyCam HD firmware through the SD Card:
- Switch SmartyCam HD off and remove the SD Card from it
- Insert the SD Card into the PC
- Visit the website www.aim-sportline.com Download Area Firmware and download the latest firmware release available in the Firmup SmartyCam HD area
- Unzip the downloaded file and copy the contained run file (smarty2\_update\_v01.XX.XX.run) on the SD Card

## Do not copy the run file in a sub-folder

- Move the SD Card from the PC to the SmartyCam HD
- Switch on the SmartyCam HD, by pushing the central and right buttons at the same time
- When the SmartyCam HD is on, release the central button
- When you will see the Linux Penguin on the display, you can also release the right button
- The firmware upgrade is now running
- At the end of this procedure switch on the SmartyCam HD only pushing the central button

To update SmartyCam HD firmware from your PC:

- Connect your Smartycam HD to the PC through USB cable
- Start SmartyManager 2 software
- = Click on Smartycam label on the left side of the screen in the same way you download movies 1
- Click on "Firmware and User info" tab 2
- Press the button "Update device to 01.XX.XX" 3

a	SmartyManager2 2.03.04 – 🗗			
🔠 🥸 🖻 🖆			0	*
2 Configuration Library	Live View Live Measures Downlo		ad Firmware and User Info	
	Transmit			
+ New Collection	Device name		Championship	
	SmartyHD versfirm 01 03 22		aim championship	
SmartyHD versfirm 01 03 22 (aim racer, aim vehicle)	Racer name		Test Type	
0	aim racer		Generic testing	
	Vehicle name			
	aim vehicle			
	Device:	SmartyHD		
	Serial ID:	3800198		
	Hardware revision	n:02A		
	Booter version:	01.02.03		
	Firmware version	01.03.22	8	
Trash			Update device to 01.03.26	
L	1			